

3205

Margin Scribe

Please Read Carefully!

Identify and verify that you have all the parts listed. In addition to the parts shown at the right, you should also have one Scribe Arm (3205A), one Pencil Holder (3205B) and one 9-1/2" One Track, which are shown in Fig. 1.

Insert two knobs (5503) through the two holes in the Scribe Arm (3205A) and start the two oval nuts (5760B) on the ends of the knobs. See fig. 1 & 2.


Insert the 1/2" screw (MF005) thru the countersunk hole in the Pencil Holder (3205B) and start the oval nut (5765B) on the end of the screw. Attach the Pencil Holder to the end of the One Track by inserting the oval nut in the T-slot of the track and tighten the screw. See fig. 1.

Attach the Scribe Arm to the One Track by inserting both oval nuts in the T-slot of the One Track, then tighten the knobs. See fig. 1.

Insert a 1/2" screw (5770B) thru both 1/4" spacers (BUSH002) and select the threaded holes on the Scribe Arm to attach them to. The holes are spaced at 1", 2" & 3" on center. The closer the spacing, the more consistent the margin will be, but the harder it is to control. The further apart the spacers are, the easier it is to control, but the margin will not be as consistent.

Insert a pencil with a blunt tip (like a golf scoring pencil) in the Pencil Holder. Adjust the position of the Scribe Arm on the One Track to the margin desired (up to 6-1/2") and mark. Be sure to keep both spacers in contact with the edge of the work for best results. See fig. 3.


©Copyright WOODHAVEN INC. 4/3/06
(800) 344-6657 or WWW.WOODHAVEN.COM

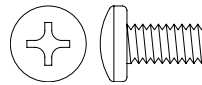


Part#	Description	Qty.
5770B	1/2" Screw	2




Part#	Description	Qty.
BUSH002	1/4" Spacer	2

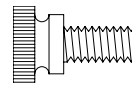


Part#	Description	Qty.
5503	Knob	2

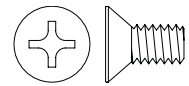

Part#	Description	Qty.
MF005	1/2" Screw	1

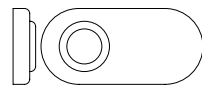

Part#	Description	Qty.
5765B	Oval Nut	1

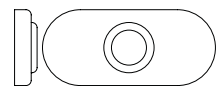

Part#	Description	Qty.
5760B	Oval Nut	2

